

400 W. Artesia Blvd.
Compton, CA 90220
Fax: (310) 747-3912
Ph: 1-800-776-0767
E-Mail: info@procompusa.com
Website: www.procompusa.com

Latest Revision:
9.20.2019



PRO COMP SUSPENSION

63156

**2020 GM Silverado 2500HD 2WD & 4WD 2 1/4" Front
Torsion Key Kit**

This document contains very important information that includes warranty information and instructions for resolving problems you may encounter. Please keep it in the vehicle as a permanent record.

Part #	Description	Qty.
94-44104	TORSION BAR KEY	2
90-8131	UPPER SHOCK MOUNT SPACERS	4

<u>RECOMMENDED PRO COMP SHOCKS</u>		
<u>2020 2500 HD:</u>	<u>Front:</u>	<u>Rear:</u>
<u>2500 HD</u>		
<u>ES9000</u>	N/A	926505
<u>ZX</u>	ZX2039	ZX2037

Equipment Available from your Pro Comp Distributor!

2020 GM Silverado 2500HD 2WD /4WD 2 1/4": Front Torsion Key Kit w/ 1 1/2" Rear: 63156K

Also, Check out our outstanding selection of Pro Comp tires to compliment your new installation!

Introduction:

- ◆ This installation requires a professional mechanic!
- ◆ We recommend that you have access to a factory service manual for your vehicle to assist in the disassembly and reassembly of your vehicle. It contains a wealth of detailed information.
- ◆ Prior to installation, carefully inspect the vehicle's steering and driveline systems paying close attention to the tie rod ends, ball joints, wheel bearing preload, pitman and idler arm. Additionally, check steering-to-frame and suspension-to-frame attaching points for stress cracks. The overall vehicle must be in excellent working condition. Repair or replace all worn or damaged parts!
- ◆ Read the instructions carefully and study the illustrations before attempting installation! You may save yourself a lot of extra work.
- ◆ Check the parts and hardware against the parts list to assure that your kit is complete. Separating parts according to the areas where they will be used and placing the hardware with the brackets before you begin will save installation time.
- ◆ Check the special equipment list and ensure the availability of these tools.
- ◆ Secure and properly block vehicle prior to beginning installation.
- ◆ ALWAYS wear safety glasses when using power tools or working under the vehicle!
- ◆ Use caution when cutting is required under the vehicle. The factory undercoating is flammable. Take appropriate precautions. Have a fire extinguisher close at hand.
- ◆ Foot pound torque readings are listed on the Torque Specifications chart at the end of the instructions. These are to be used unless specifically directed otherwise. Apply thread lock retaining compound where specified.
- ◆ **Please note that while every effort is made to ensure that the installation of your Pro Comp lift kit is a positive experience, variations in construction and assembly in the vehicle manufacturing process will virtually ensure that some parts may seem difficult to install. Additionally, the current trend in manufacturing of vehicles results in a frame that is highly flexible and may shift slightly on disassembly prior to installation. The use of pry bars and tapered punches for alignment is considered normal and usually does not indicate a faulty product. However, if you are uncertain about some aspect of the installation process, please feel free to call our tech support department at the number listed on the cover page. We do not recommend that you modify the Pro Comp parts in any way as this will void any warranty expressed or implied by the Pro Comp Suspension company.**

INSTALLATION INSTRUCTIONS:

1. Measure the vehicle from the center of the hub to the fender lip and record this measurement below.


LF: _____ RF: _____

LR: _____ RR: _____

2. Be sure you are working on a level surface. Block the rear tires and raise the front of the vehicle. Support the frame with jack stands.
3. Remove the front wheels.
4. Measure the torsion bar adjusting screw depths and record this dimensions for later use on reassembly. Mark the orientation of the torsion bar in relation to the front A-arm.

LEFT: _____ RIGHT: _____

5. Starting on the driver's side, remove the torsion bar adjusting screw. Apply a small amount of lubrication grease to the torsion bar puller threads (**67965** is recommended) and the puller shaft-to-adjuster arm contact point. Load the puller and torsion adjuster arm until the torsion bar keeper can be removed from the cross member. Release the puller to unload the torsion bar.

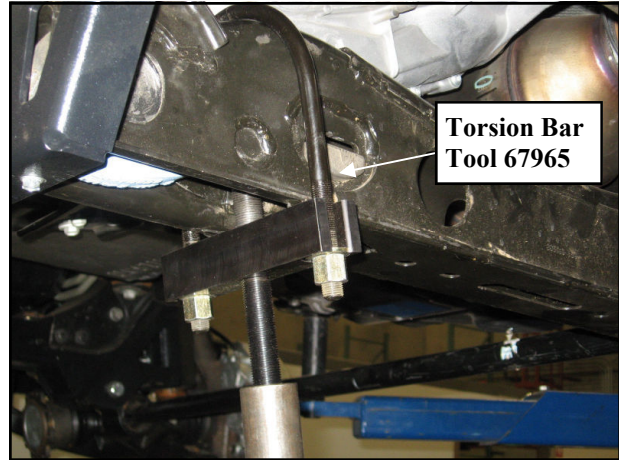

6. Completely remove the torsion bar key bolt from the key assembly.
7. With the bar unloaded, slide it forward out of the **OE** torsion bar key and remove the key from the vehicle.

NOTE: If the bar seems stuck, use a hammer and punch through the hole in the rear of the cross member to dislodge it.


8. Install the Pro Comp Forged torsion key (**94-44104**) and slide the torsion bar back into position. Be sure to line up the previously applied orientation marks.

IMPORTANT! Make sure the Torsion Bar is extended at least 1/4" inch through the Torsion Key.

9. Using the torsion bar unloading tool, apply pressure with the torsion key to allow the torsion key keeper to be reinstalled.
10. Reinstall the **OE** adjusting bolt to the keeper, and reset the torsion bar pre-load bolts using the measurements previously taken.

IMPORTANT!: Be sure that at least $\frac{1}{4}$ " of bolt threads extend beyond torsion key keeper.

NOTE: Each $\frac{1}{4}$ " of adjustment on the bolt equals approximately 1" at the wheel.

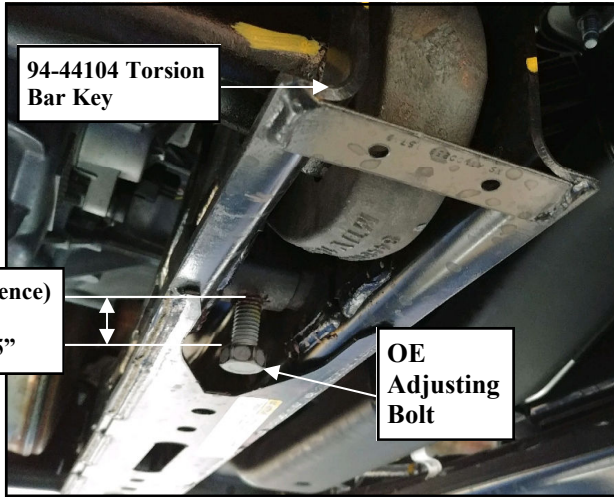


11. Now would also be a good time to inspect the shocks for damage or fluid leakage. Replace if necessary.

NOTE: For improved performance Pro Comp shocks are recommended.

Shock Spacer Installation

- A. Unbolt the front shock top mount from the vehicle.
- B. Carefully pull the shock down and install the provided upper shock spacers (90-8131) onto the upper shock mounting studs.
- C. Reinstall the upper shock mount and secure using the previously removed OE hardware. Torque to manufacturer's specification.

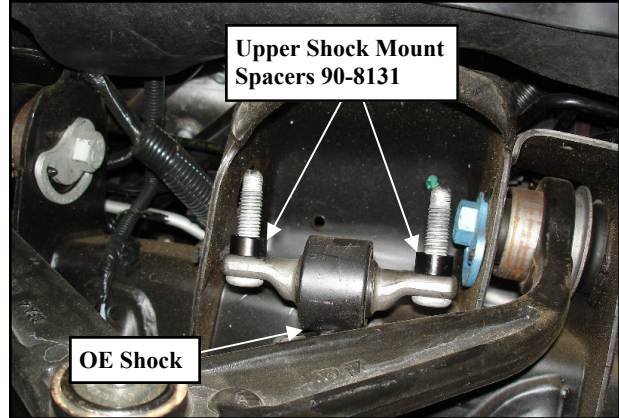

12. Repeat steps 5 through 10 and the shock spacer installation on the passenger side of the vehicle.
13. Install the front tires/wheels and lower the vehicle onto the ground.
14. Check the ride height of the vehicle by measuring the distance between the tires and fenders making sure both sides of the truck are even. Adjust as needed.
15. Torque all bolts to manufacturer's specifications. Re-torque all bolts after 500 miles.

NOTES:

- ⇒ On completion of the installation, have the suspension and headlights re-aligned.
- ⇒ After 100 miles recheck for proper torque on all newly installed hardware.
- ⇒ Recheck all hardware for tightness after off road use.

Use this only as a guide for hardware without a called out torque specification in the instruction manual.

Bolt Torque and ID						
Decimal System			Metric System			
All Torques in Ft. Lbs. Maximums						
Bolt Size	Grade 5	Grade 8	Bolt Size	Class 9.8	Class 10.9	Class 12.9
5/16	15	20	M6	5	9	12
3/8	30	45	M8	18	23	27
7/16	45	60	M10	32	45	50
1/2	65	90	M12	55	75	90
9/16	95	130	M14	85	120	145
5/8	135	175	M16	130	165	210
3/4	185	280	M18	170	240	290

1/2-13x1.75 HHCS **Grade 5** **Grade 8**
(No. of Marks + 2)

D T L X

G = Grade (Bolt Strength)
D = Nominal Diameter (Inches)
T = Thread Count (Threads per Inch)
L = Length (Inches)
X = Description (Hex Head Cap Screw)

M12-1.25x50 HHCS

D T L X

P = Property Class (Bolt Strength)
D = Nominal Diameter (Millimeters)
T = Thread Pitch (Thread Width, mm)
L = Length (Millimeters)
X = Description (Hex Head Cap Screw)

Revision Page:



The PRO COMP PROMISE WARRANTY

At Pro Comp, we know you have many choices when selecting products to personalize your vehicle. You should demand nothing but the highest quality available and have total confidence that the products you selected are the best in the industry. It is for these reasons that Pro Comp Suspension products are backed by the best warranty in the industry...the Pro Comp Promise!

Pro Comp promises that its products will last a lifetime or we will replace it free of charge. It's that simple! Because of our commitment to quality and manufacturing excellence, we are able to stand behind our products. FOREVER.

It is Pro Comp's Promise that if one of our suspension products breaks not due to misuse, neglect or vandalism, we will replace it. Whether you are the original purchaser or not, you can be assured that we will make it right. The Pro Comp Promise covers all suspension products including shocks and steering stabilizers. Buy Pro Comp Suspension today and enjoy it for the rest of your life!

That's our Pro Comp Promise!

Notice to Owner, Operator, Dealer and Installer:

Vehicles that have been enhanced for off-road performance often have unique handling characteristics due to the higher center of gravity and larger tires. This vehicle may handle, react and stop differently than many passenger cars or unmodified vehicles, both on and off-road. You must drive your vehicle safely! Extreme care should always be taken to prevent vehicle rollover or loss of control, which can result in serious injury or even death. Always avoid sudden sharp turns or abrupt maneuvers and allow more time and distance for braking! Pro Comp reminds you to fasten your seat belts at all times and reduce speed! We will gladly answer any questions concerning the design, function, maintenance and correct use of our products.

Please make sure that the Dealer / Installer explains and delivers all warning notices, warranty forms and instruction sheets included with Pro Comp product.

Warranty and Return Policy:

Pro Comp warrants its full line of products to be free from defects in workmanship and materials for the life of the product. Pro Comp's obligation under this warranty is limited to repair or replacement, at Pro Comp's option, of the defective product. Any and all costs of removal, installation, freight or incidental or consequential damages are expressly excluded from this warranty. Pro Comp is not responsible for damages and / or warranty of other vehicle parts related or non-related to the installation of Pro Comp product. A consumer who makes the decision to modify his vehicle with aftermarket components of any kind will assume all risk and responsibility for potential damages incurred as a result of their chosen modifications. Warranty coverage does not include consumer opinions regarding ride comfort, fitment and design. Warranty claims can be made directly with Pro Comp or at any factory authorized Pro Comp dealer.

IMPORTANT! To validate the warranty on this purchase please be sure to mail in the warranty card.

Claims not covered under warranty

* Parts subject to normal wear; this includes bushings, bump stops, ball joints, tie rod ends and heim joints.

* Finish after 90 days.

* Damage caused as a result of not following recommendations or requirements called out in the installation manuals.

Pro Comp MX Series coil-over shocks are considered a serviceable shock with a one-year warranty against leakage only. Rebuild service and replacement parts will be available and sold separately by Pro Comp. Contact Pro Comp for specific service charges. Pro Comp accepts no responsibility for any altered product, improper installation, lack of or improper maintenance or improper use of our products.

E-Mail: info@procompusa.com
Website: www.procompusa.com
Fax: (310) 747-3912
Ph: 1-800-776-0767

PLACE
WARRANTY REGISTRATION
NUMBER
HERE: _____